

One, two, three – done!

How to install your balcony flooring easily and simply on a steel substructure:

1 Beam profile rubber 8-11


Slide the beam profile rubber 8-11 over the U, T or I beam, or the corresponding steel section. The rubber insert provides soft mounting and sound reduction.

2 Carrier profile 20

Now slide the carrier profile 20 over the rubber carrier insert. The „floating“ bearing takes up any potential linear expansion.

3 balkoFLOOR 333

Now install the **balkoFLOOR** panels on the carrier profile. A screw channel is provided in the carrier profile. Thanks to the combined profiles, an incline is created ensuring that water can flow off immediately.

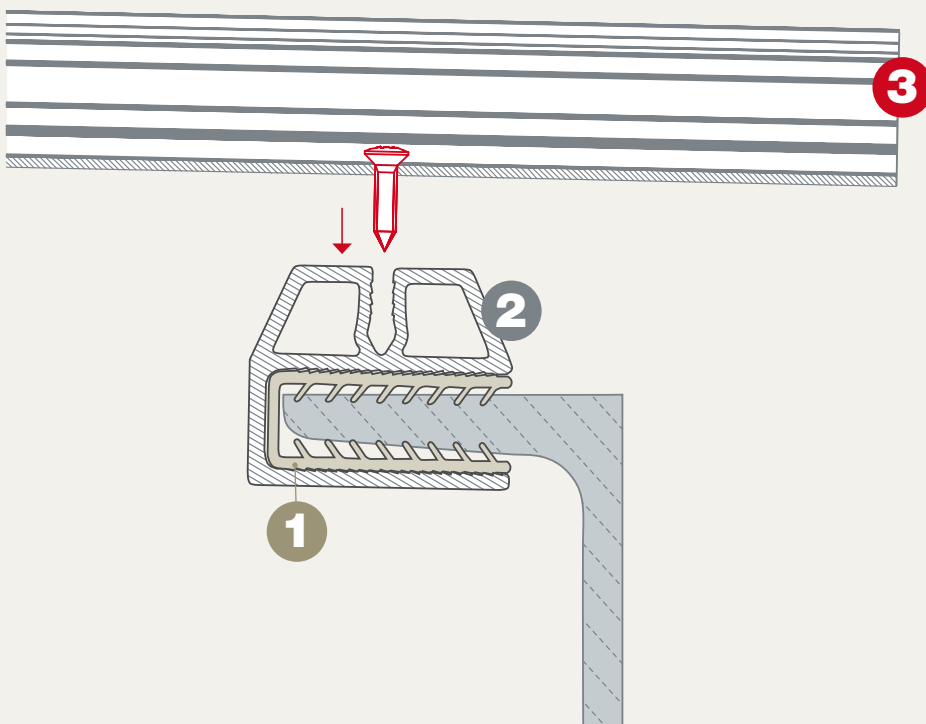

Incline formed by different height profiles

